




Compaq Presario V2414NR Hard Drive Replacement

If you have a faulty hard drive, this guide will tell you how to remove and replace it.

Written By: Ryan Schmidt

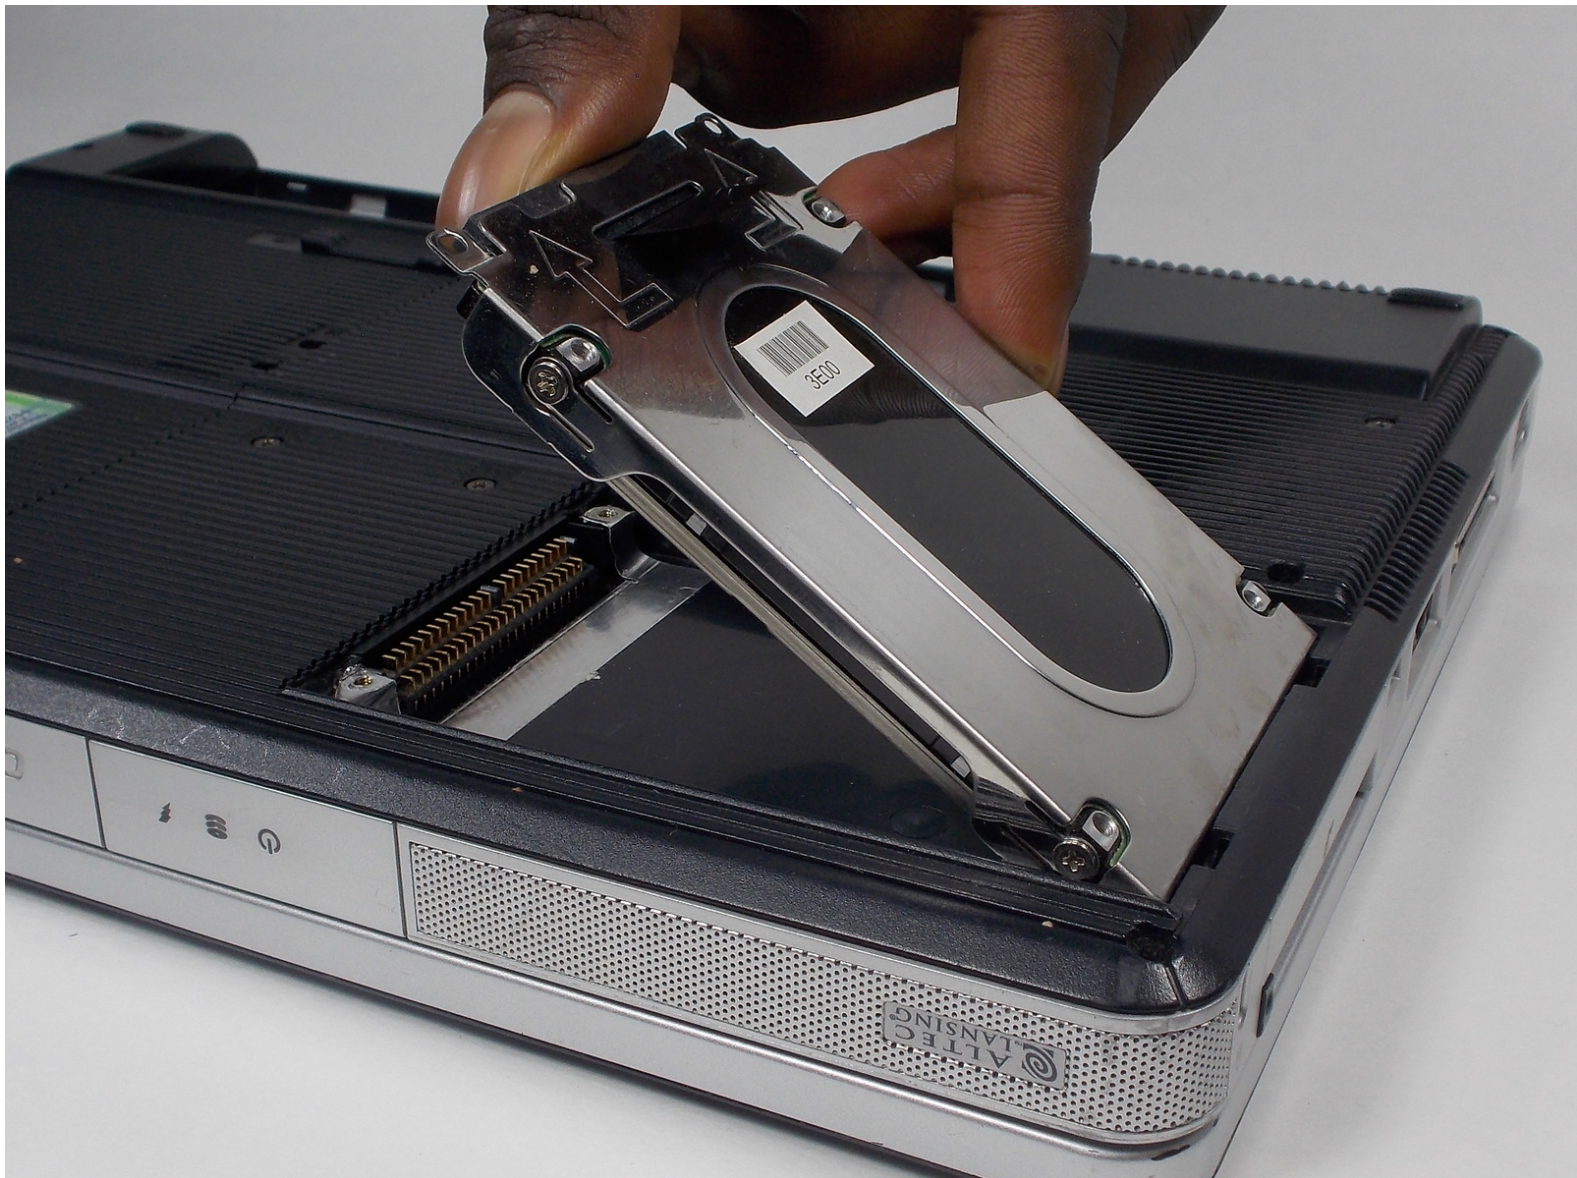

INTRODUCTION

The hard drive is a vital component which stores the operating system and all your data. If your drive is broken or has errors, you'll probably have blue screen errors.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery




- Shutdown the computer.
- Remove all external devices.
- Unplug the power, and any other cords, from the laptop.
- Turn the laptop upside down, with the front towards you.

Step 2



- Slide the battery release latch to the left until the battery pops up.
 - Lift the front edge of the battery pack and swing it back to remove it.
- ☞ When reassembling, first align the back of the battery with the chassis, then press the front downwards until it latches.

Step 3 — Hard Drive

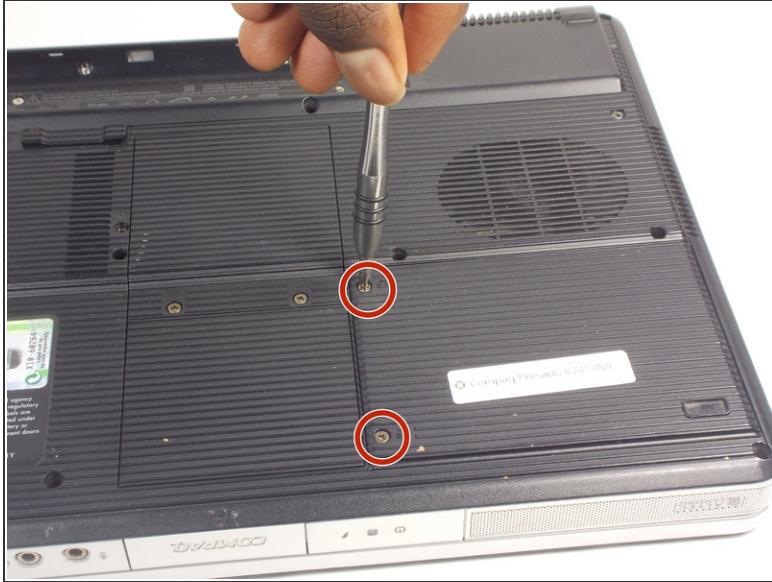


- Loosen the two 5mm Philips #1 screws that secure the hard drive cover to the computer.
 - ⓘ These screws are captured to the cover panel.
- Lift the left side of the cover and swing it to the right to remove it.

Step 4




- Grasp the black Mylar tab on the hard drive frame and pull firmly straight up until the hard drive disconnects from the computer, and remove it.
- ★ When reassembling: First, align the two tabs on the hard drive with the slots in the chassis, then press down on the left edge of the hard drive to seat the contacts.

Step 5

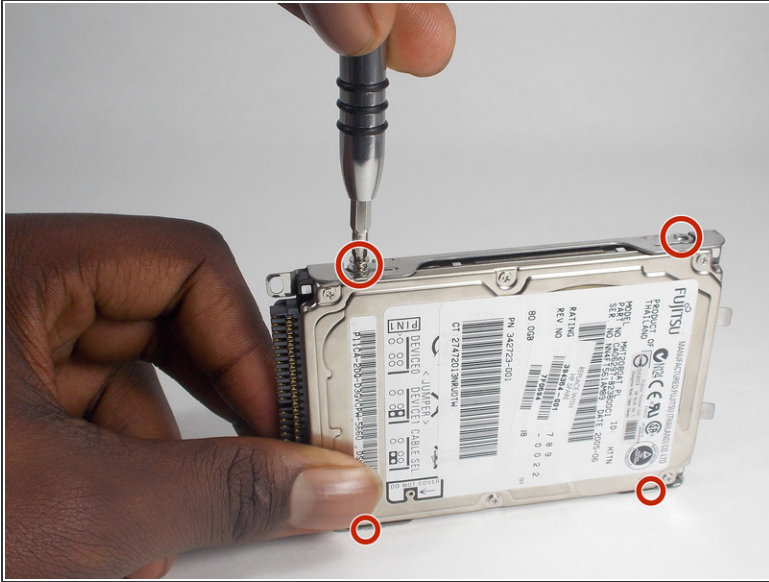

- Remove the four 4mm Philips #1 screws, two on each side, that secure the hard drive frame to the hard drive.
- ⚠ These screws are different from the rest of the laptop screws. You can damage the drive using the wrong screws.
- Lift the frame to remove it from the hard drive.

Step 6

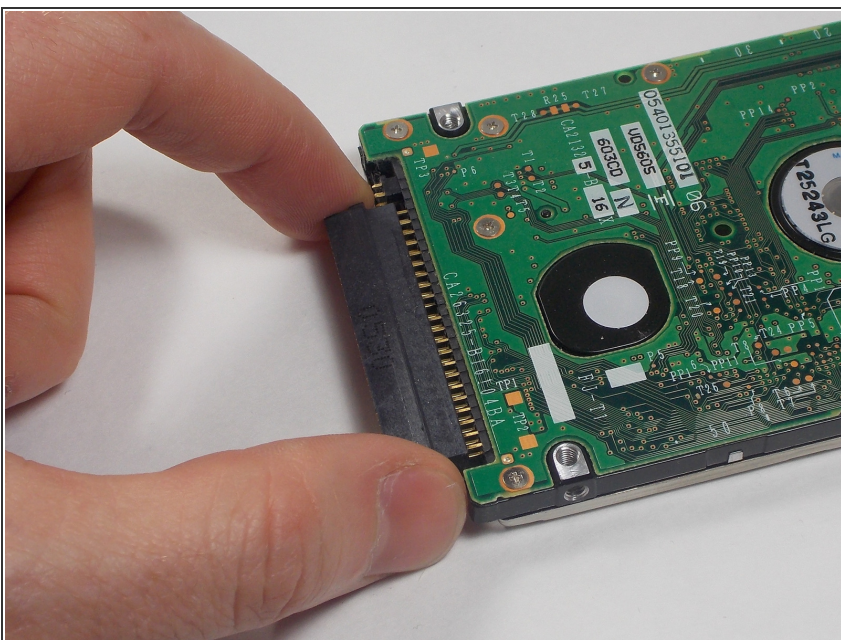

- Slide the hard drive connector straight off of the hard drive.
- ⚠ Be sure not to tilt the connector while removing it to avoid bending the delicate hard drive connector pins.
- ☞ When reassembling, position the contacts towards the top of the drive (metal covered side).

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 09:34:40 AM.